

# LISTA DE APLICACIONES - BUYERS GUIDE

## RB2165




8 424073 139146

Qty: 300

Weight: 2.010

O.E.M.	MAKE
58281390AA	RAM
6 821 148 8AA	FIAT
68281390AA	RAM
7 736 659 0	FIAT
7 736 691 5	FIAT
7 736 732 8	FIAT

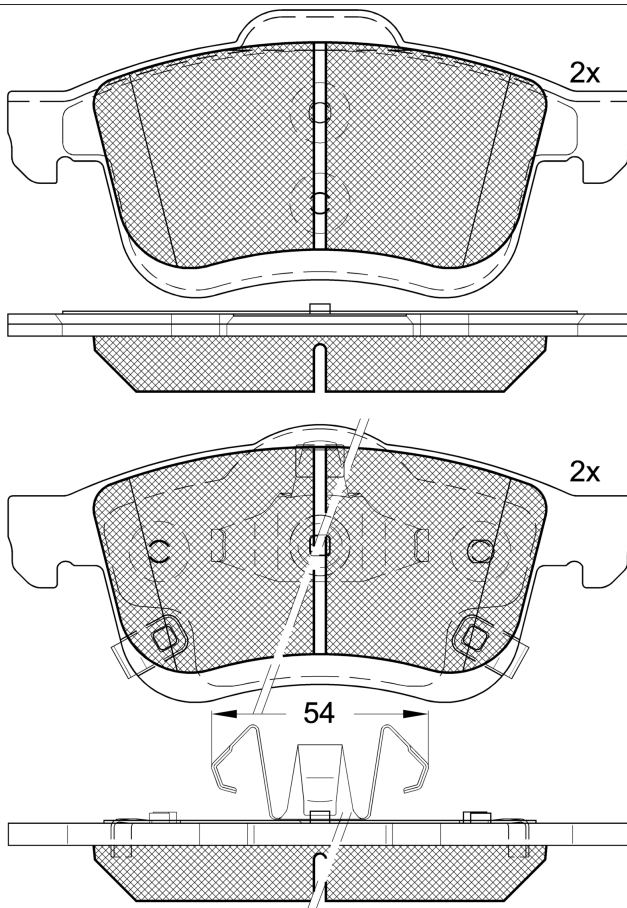

## RB2165



90R-02A0111/3852



Ate - Teves

155.2x69.1x20

155.4x71.6x20

WVA
24727
25905
25906
25907

FMSI
D1721-8945

Sin Filas



Trac.	CC	Kw	CV
-------	----	----	----



Front / Rear

### FIAT

#### 500 L (351\_, 352\_) 09.12-

[CAMBIADO]:Fastback (Mini MPV-M1 Segment)

1.4 (199LYB1B) (843 A1.000)	Gasolina	FWD	1368	70	95	09.12-	*
1.4 (199LYF1B) (940 B7.000)	Gasolina	FWD	1368	88	120	10.13-	*
1.4	Gasolina	FWD	1368	93	127	05.14-	*
1.4 LPG (199LYF1B) (940 B7.000)	Gasol./Gas (LPG)	FWD	1368	88	120	02.14-	*
1.6 D Multijet (199LYE1B) (552 80 444)	Diesel	FWD	1598	88	120	09.13-	*
1.6 D Multijet (199LYE1B) (940 C1.000)	Diesel	FWD	1598	88	120	09.13-	*
1.6 D Multijet (199LYE1B) (955 A3.000)	Diesel	FWD	1598	88	120	09.13-	*

### RAM

#### PROMASTER 1500 (VF1) 09.13-

[CAMBIADO]:Furgón (LCVs-N1 Segment)

3.6	Gasolina	FWD	3604	209	284	09.13-	*
-----	----------	-----	------	-----	-----	--------	---

#### PROMASTER 2500 (VF2) 09.13-

[CAMBIADO]:Furgón (LCVs-N1 Segment)

3.6	Gasolina	FWD	3604	209	284	09.13-	*
-----	----------	-----	------	-----	-----	--------	---

#### PROMASTER 3500 (VF3) 09.13-

[CAMBIADO]:Furgón (LCVs-N1 Segment)

3.6	Gasolina	FWD	3604	209	284	09.13-	*
-----	----------	-----	------	-----	-----	--------	---